

## Appliance S-Type Lanner

Welcome to the SCION world! Here you can find initial connection instructions for your Anapaya S-type device. Once the device is unpacked and installed in your technical environment, proceed with the following steps on the Rear Panel:

1. Connect the RJ45 cable to the termination point of your WAN access on port **3** .
2. Connect the RJ45 cable to your LAN on port **5** .
3. Plug the power supply **DC** .
4. Turn the device on by pressing the power button **P** .


### Note

Your support may indicate other ports to connect the RJ45 cables to.



After a few minutes, the LEDs on the front panel should have the following statuses:

1. System should be solid green.
2. Power should be solid green.
3. The LED 3/4 represents the WAN port(s). The link status of the port **3** should be blinking amber.
4. The LED 5/6/7/8 represents the LAN port(s). The link status of the port **5** should be blinking amber.

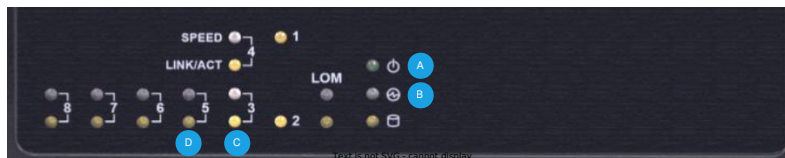

### Note

If the IP addresses has not been assigned automatically via DHCP:

1. Connect a serial cable to the console port ( **C** on the first picture).
2. Then connect to the serial console using a baud rate of **115200** . Authenticate to the appliance using the default credentials, login: **anapaya** and password: **anapaya** .
3. Alternatively port **8** is statically assigned 169.254.1.1/30, and by connecting a computer with a static IP address in the same subnet i.e. 169.254.1.2/30, you can SSH to the appliance using the default credentials.
4. Once logged in, you can setup the WAN IP parameters as indicated by your support. For more information consult [docs.anapaya.net](https://docs.anapaya.net) .
5. DHCP will be active on all ports, and port **8** will be assigned 169.254.1.1/30 until an appliance configuration is applied.